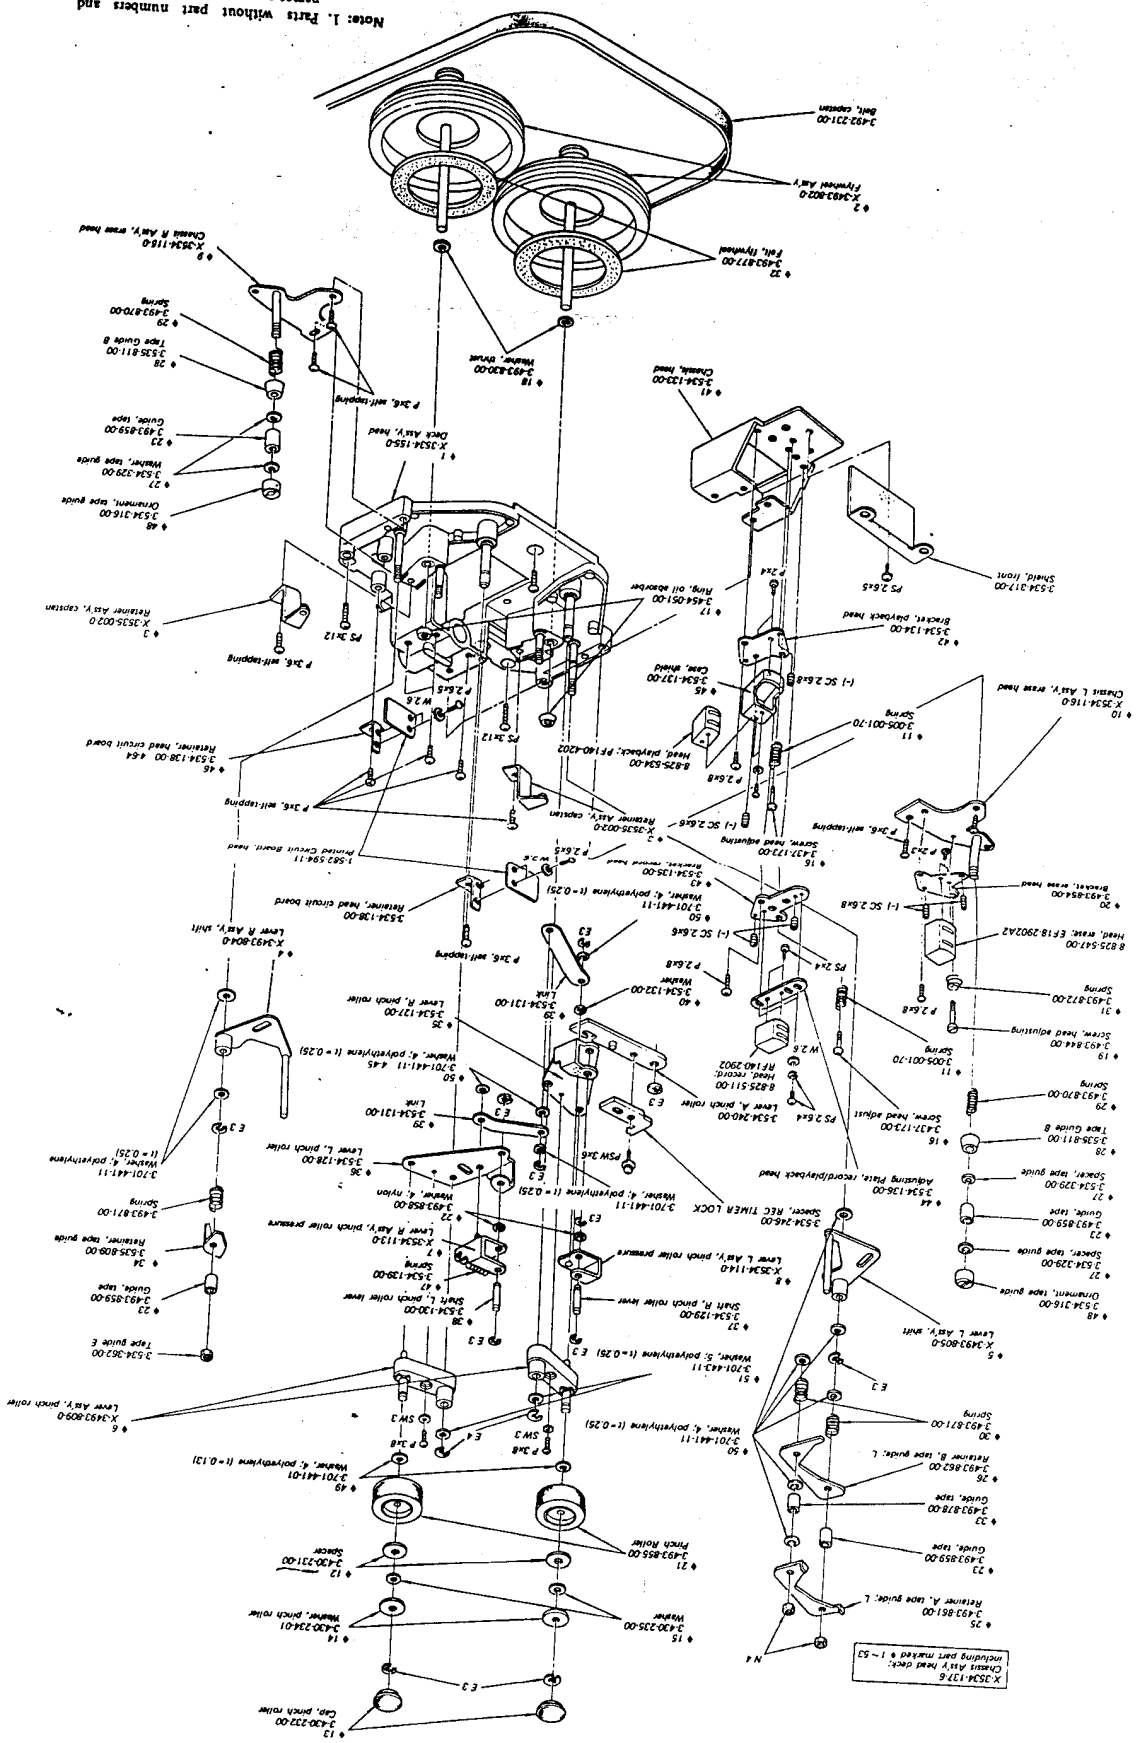
Note: 1. Parts without part numbers and names are not available.
2. All screws are Phillips type (cross recess type) unless otherwise indicated
(-): slotted head
X-3534-117-6
Chassis Ass'y, head deck;
including part marked ♦ 1 ~ 53
Shield, front
Chassis, head
Bracket, playback head
Chassis L Ass'y, erase head
Chassis R Ass'y, erase head
Flywheel Ass'y
Belt, capstan
Felt, flywheel
Washer, brass
Tape Guide B
Spring
Guide, tape
Ornament, tape guide
Washer, tape guide
Guide, tape
Clamp, tape guide
Retainer, head circuit board
Retainer Ass'y, capstan
Head, playback; PF140-4202
Head, erase; EF18-2902A2
Head, record/playback; RF140-2902
Printed Circuit Board, head
Screw, head adjusting
Adjusting Plate, record/playback head
Spacer, REC TIMER LOCK
Lever L Ass'y, pinch roller pressure
Lever R Ass'y, pinch roller pressure
Lever L, pinch roller
Lever R, pinch roller
Lever L Ass'y, shift
Lever R Ass'y, shift
Shaft L, pinch roller lever
Shaft R, pinch roller lever
Link
Pinch Roller
Cap, pinch roller
Retainer A, tape guide L
Retainer B, tape guide L
Washer, 4; polyethylene (t = 0.13)
Washer, 4; polyethylene (t = 0.25)
Washer, 5; polyethylene (t = 0.25)
Washer, 4; nylon
Washer, tape guide
Washer, pinch roller
Spacer
Tape guide E
Tape guide B
Retainer, tape guide
Guide, tape
Spring
Lever, head adjust
Screw, head adjusting
Spacer, tape guide
Spacer
Screw, head adjusting
Screw, head adjusting
Screw, head adjusting